




FOR OFF ROAD USE ONLY

DRCAX -201 CAPTIVE AXLE BLOCK 18-20 KAWASAKI ZX 400/Z 400

1. Lift rear wheel off the ground using a stand or a jack .
2. Remove rear axle while supporting rear wheel.
3. Remove stock blocks and axle flanges .
4. Install driven racing axle blocks onto axle flanges .
5. Install axle blocks into swing arm and tighten m6 bolts. (12 ft/lbs torque)
6. Install axle and rear wheel and adjust chain.
7. Install safty nut(oem) onto axle flange . (12 lbs torque)

re use oem parts

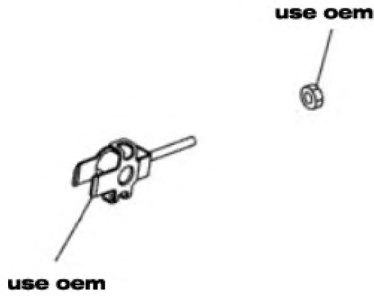

(NOTE :START AT THE MOST FORWARD POSITION)



Note : use blue locktite on all screws. Use oem torque setting for axle nut .




FOR OFF ROAD USE ONLY

DRCAX -201 CAPTIVE AXLE BLOCK 18-20 KAWASAKI ZX 400/Z 400

1. Lift rear wheel off the ground using a stand or a jack .
2. Remove rear axle while supporting rear wheel.
3. Remove stock blocks and axle flanges .
4. Install driven racing axle blocks onto axle flanges .
5. Install axle blocks into swing arm and tighten m6 bolts. (12 ft/lbs torque)
6. Install axle and rear wheel and adjust chain.
7. Install safty nut(oem) onto axle flange . (12 lbs torque)

re use oem parts

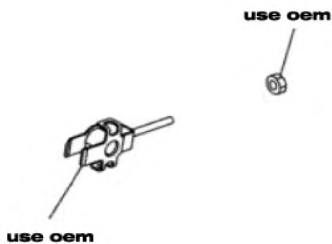

(NOTE :START AT THE MOST FORWARD POSITION)



Note : use blue locktite on all screws. Use oem torque setting for axle nut .