



FOR OFF ROAD USE ONLY

DRCAX -204 CAPTIVE AXLE BLOCK FZ07/MT07 2022 R7

1. Lift rear wheel off the ground using a stand or a jack .
2. Remove rear axle while supporting rear wheel.
3. Remove stock blocks and axle flanges . (see fig 1)
4. Install driven racing axle blocks onto axle flanges .
5. Install axle blocks into swing arm and tighten m6 bolts. (12 ft/lbs torque)
6. Install axle and rear wheel and adjust chain.
7. Install safty nut(oem) onto axle flange . (12 lbs torque)

NOTE: LEAVE CAPTIVE SCREWS LOOSE AS ITS A TIGHT FIT

NOTE : DO NOT MIX CHAIN PULLERS THEY ARE SIDE SPECIFIC.

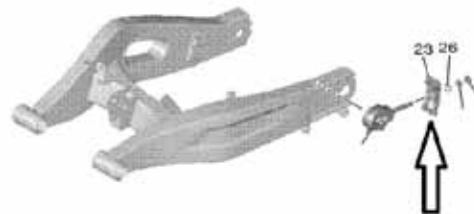


FIG 1

REMOVE ON BOTH SIDES



LEFT SIDE ARROW UP.



RIGHT SIDE ARROW UP

LEFT SIDE:
CHAIN PULLER ARROW FACING UP
CAPTIVE BLOCK PART NUMBER IS 100683

RIGHT SIDE:
CHAIN PULLER ARROW FACING UP
CAPTIVE BLOCK PART NUMBER IS 100684

Note : use blue locktite on all screws. Use oem torque setting for axle nut . (NOTE :START AT THE MOST FORWARD POSITION)



FOR OFF ROAD USE ONLY

DRCAX -204 CAPTIVE AXLE BLOCK FZ07/MT07 2022 R7

1. Lift rear wheel off the ground using a stand or a jack .
2. Remove rear axle while supporting rear wheel.
3. Remove stock blocks and axle flanges .
4. Install driven racing axle blocks onto axle flanges .
5. Install axle blocks into swing arm and tighten m6 bolts. (12 ft/lbs torque)
6. Install axle and rear wheel and adjust chain.
7. Install safty nut(oem) onto axle flange . (12 lbs torque)

NOTE: LEAVE CAPTIVE SCREWS LOOSE AS ITS A TIGHT FIT

NOTE : DO NOT MIX CHAIN PULLERS THEY ARE SIDE SPECIFIC.

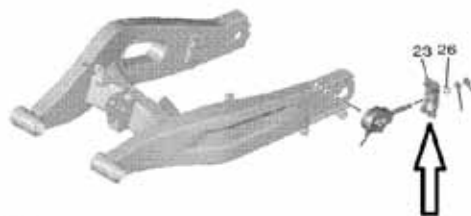


FIG 1

REMOVE ON BOTH SIDES



LEFT SIDE ARROW UP.



RIGHT SIDE ARROW UP

LEFT SIDE:
CHAIN PULLER ARROW FACING UP
CAPTIVE BLOCK PART NUMBER IS 100683

RIGHT SIDE:
CHAIN PULLER ARROW FACING UP
CAPTIVE BLOCK PART NUMBER IS 100684

Note : use blue locktite on all screws. Use oem torque setting for axle nut . (NOTE :START AT THE MOST FORWARD POSITION)