



FOR OFF ROAD USE ONLY

DRCAX-206 captive axle block

22-24 Honda Grom

1. Lift rear wheel off the ground using a stand or a jack .
2. Remove rear axle while supporting rear wheel.
3. Remove stock blocks and axle flanges .
4. Install driven racing axle blocks onto axle flanges . (see fig 2)
5. Install axle blocks into swing arm and tighten m6 bolts.(12 FT/LBS TORQUE) (NOTE :START AT THE MOST FORWARD POSITION)
6. Install axle and rear wheel and adjust chain.
7. Install safty nut(oem) onto axle flange . (12FT/LBS TORQUE)

Note: use blue locktite on all bolts

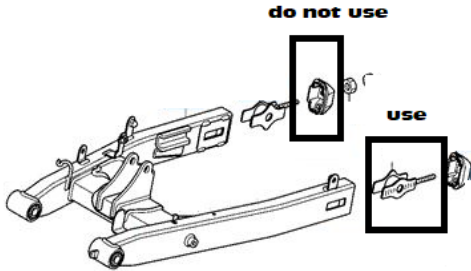


fig-1



fig-2



FOR OFF ROAD USE ONLY

DRCAX-206 captive axle block

22-24 Honda Grom

1. Lift rear wheel off the ground using a stand or a jack .
2. Remove rear axle while supporting rear wheel.
3. Remove stock blocks and axle flanges .
4. Install driven racing axle blocks onto axle flanges . (see fig 2)
5. Install axle blocks into swing arm and tighten m6 bolts.(12 FT/LBS TORQUE) (NOTE :START AT THE MOST FORWARD POSITION)
6. Install axle and rear wheel and adjust chain.
7. Install safty nut(oem) onto axle flange . (12FT/LBS TORQUE)

Note: use blue locktite on all bolts

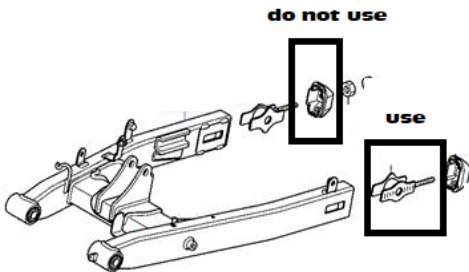


fig-1



fig-2