


- 1. Remove the hoses from the factory reed covers
- 2. Remove BOTH the reed covers from the cylinder
- 3. Install Driven Racing reed covers leave reeds inside.
- 4 cap hole in air box with supplied cap.

FOR OFF ROAD USE ONLY

DSBLOCK-34

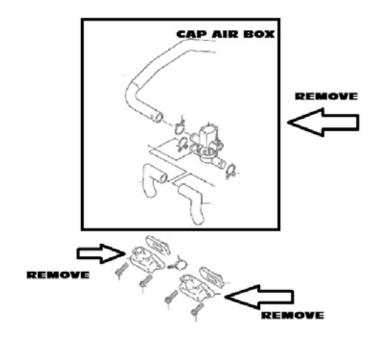



- 1. Remove the hoses from the factory reed covers
- 2. Remove BOTH the reed covers from the cylinder
- 3. Install Driven Racing reed covers leave reeds inside.
- 4 cap hole in air box with supplied cap.

FOR OFF ROAD USE ONLY

DSBLOCK-34

